


Model Number R60T-V

Bootstrap Compressor 2:1 Ratio Air Pressure Booster System

The Bootstrap Compressor is an air-driven, air pressure booster. It requires no electricity, cooling water, or air-line lubricator and is explosionproof. Shop air is fed to the inlet port through a filter, and is split into two streams inside the booster. One stream flows to the compressor portion of the unit and is boosted to higher pressure. The other stream drives the compressor portion, and is consumed during booster operation. The drive air stream is regulated to maintain the discharge pressure set by the external regulator handle. Drive air consumption is approximately 1/2 to 1 times the amount of pressure-boosted air. For example, if 100 scfm of high pressure air is required, the Bootstrap Compressor will need 150-200 scfm of shop air, and 50-100 scfm of that air will be vented through an exhaust silencer. For a given shop air pressure, Model R60T-V can deliver high pressure air at any flowrate up to the maximum shown in the graph. The pressure regulator enables the booster to adjust automatically to changes in high pressure air demand or shop air pressure. When there is no demand for high pressure air, the booster stalls at the discharge pressure set by the regulator and consumes no energy. When there is a need for high pressure air, the tank pressure drops which causes the booster to restart automatically.

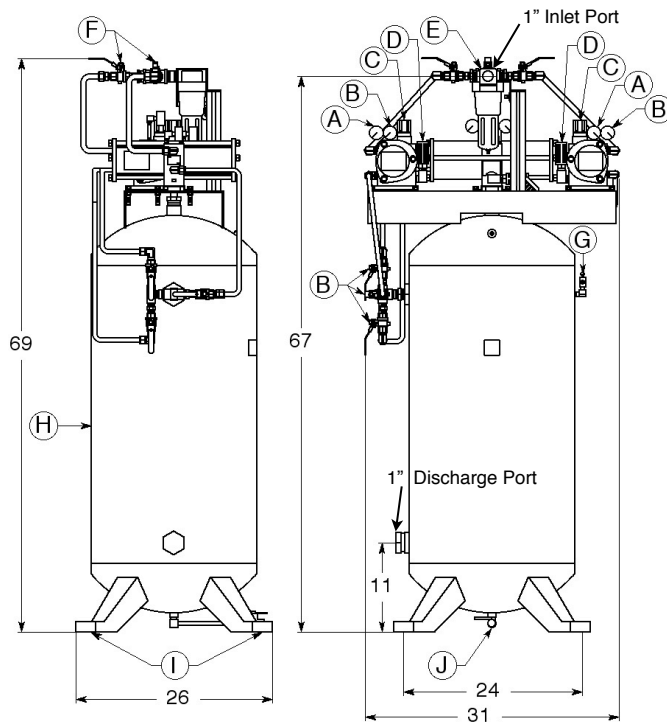

*Dimensions are in inches.

MODEL R60T-V FEATURES

- A. Inlet Pressure Gauge
- B. Discharge Pressure Gauge
- C. Built-in Pressure Regulator
- D. Exhaust Silencer
- E. 1 FNPT Inlet Filter
- F. 1/2 FNPT Booster Shutoff Valve
- G. 200 psig ASME Relief Valve
- H. 60 gallon, 200 psig ASME Tank
- I. Four 1/2" Diameter Mounting Holes
- J. 1/4 FNPT Condensate Drain Valve


MODEL R60T-V SPECIFICATIONS

- Maximum 2 to 1 boost ratio
- Capable of 100% duty cycle
- Inlet pressure range of 15-150 psig
- Discharge pressure range of 15-190 psig
- Temperature range of 40-130°F
- Approximate weight of 265 pounds
- Integral regulator controls discharge pressure and is self-relieving

MPS
MIDWEST
PRESSURE
SYSTEMS

Midwest Pressure Systems, Inc.
1035 Entry Drive, Bensenville, IL 60106
Phone 630-766-6049 Fax 630-766-6236
www.midwestpressuresystems.com

Model R60T-V Flowrate vs Supply and Discharge

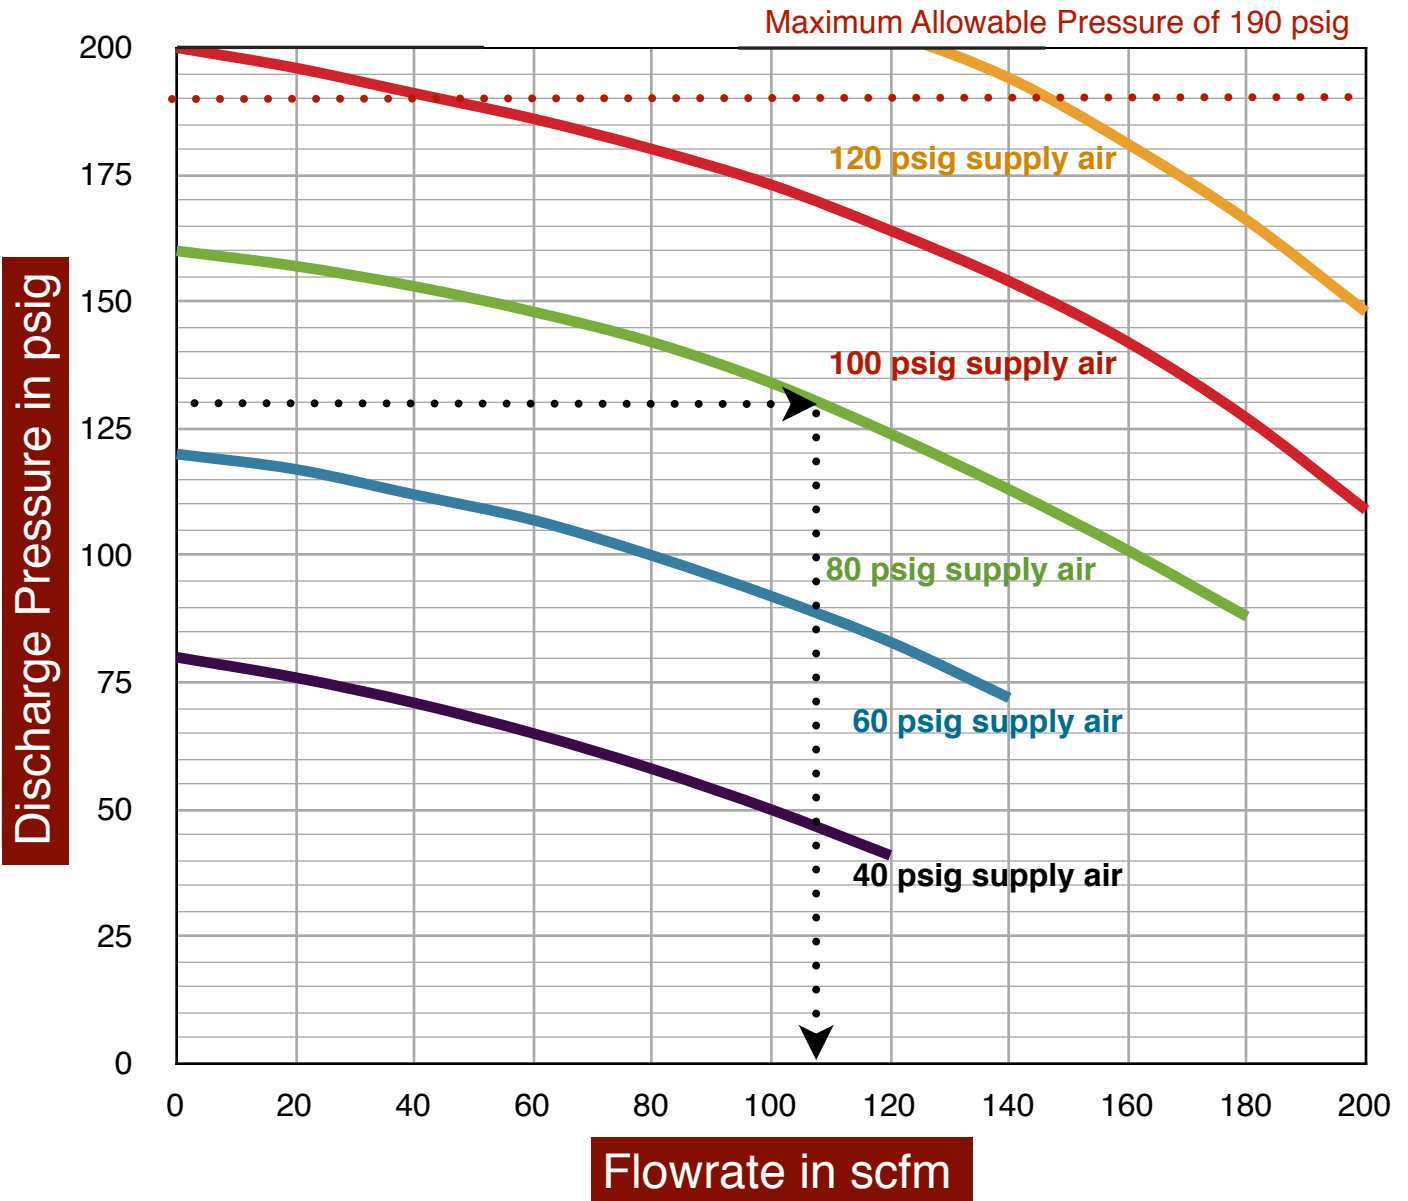

Use the curves above to determine the Model R60T-V air pressure booster maximum discharge flowrate for a given set of operating conditions. In the example shown above, a maximum discharge pressure of 130 psig is desired and 80 psi supply air is available. Follow the 130 psi line until it intersects with the 80 psi supply air

curve. Draw a vertical line from the intersection down to the bottom line to determine the maximum flowrate of 114 scfm. The booster can operate at any flowrate from 0 to the maximum flowrate. It will automatically adjust its operating speed as long as the required flowrate is in this range.



Midwest Pressure Systems, Inc.
 1035 Entry Drive, Bensenville, IL 60106
 Phone 630-766-6049 Fax 630-766-6236
www.midwestpressuresystems.com

